

# Use & care manual Manuel d'utilisation et d'entretien

Range hood / Hotte de cuisine : Aroug®- Practix (Pr101-BL)

Content	Contenu
Control Buttons2	Boutons de contrôle
Filter maintenance3	Entretien des filtres6
Replace lights4	Remplacement des lumières
Cleaning 4	•

## **USE & CARE MANUAL**


## **Control Buttons and display**

This hood is equipped with an electronic motor and lamp control. The control is able to set 4 different fan speeds, dim the light and has a programmable timer function. This hood is also equipped with a display to show the status of your hood and make easy the control.

#### **Automatic Timer**

This hood is equipped with an automatic timer to avoid prolonged operation inadvertently. After 2 hours of operation, the hood will stop working by itself.

In the following drawing are described the main key functions.

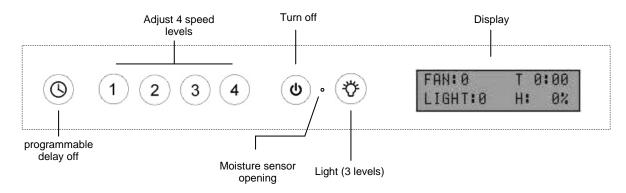

**Display**: this display will show the hood status and provide the information you need to control your hood. To switch from the two languages (English and French) press and holding "Off button" and then press on "4".



**Off button**: This button will turn off the fan at any speed.

**Speed level buttons**: these buttons will allow you to choose one of the 4 the speeds of your fan for your convenience. When choosing a speed, a screen like the one below will display the selected value. After a few seconds, the main menu will appear again.



#### **USE & CARE MANUAL**

**Light button**: This button will switch your light intensity through 3 levels from level 0 (or off) to the level 3 (max). To turn off the lights, press the button until the level 0. When you push the light button the display will show the following message depending of the chosen light level:



**Delay button**: This button will allow you to activate and adjust the timer from 5 to 30 minutes. To use it, simply press this button when the fan is running. The timer begins to decrement and you can follow state, on the main screen. To increase the timer, press repeatedly until the desired value.

TIMER 5:00

#### Filter maintenance


To make your hood ventilation efficient, it's important to clean the filters frequently. This hood is provided with a filter clean reminder system. After 50 hours of use, the display will show the message "CLEAN FILTERS" reminding that you should clean your filters. The filters are made in stainless steel and can be washed by hand or in the dishwasher.

To remove the filters:

- turn off the fan and the light
- Pull the spring release handle

To reset the 50hours counter, press and hold the "off" button until this message disappear.

CLEAN FILTERS RESET: HOLD OFF

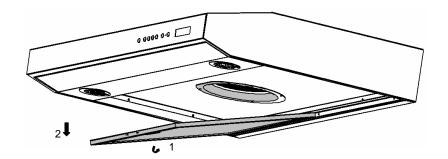


## **USE & CARE MANUAL**

# **Replace lights**

To replace the lights follow the following steps:

- Remove the inner lamp lens cover by inserting a small flat blade screwdriver into each of the three slots and gently prying it free.
- Grasp the bulb and pull it straight out.
- Replace with 12 volt, 20 watt halogen bulbs with a G4 base.
- Replace inner cover by inserting the three retaining tabs into the three slots and pressing them firmly in place.



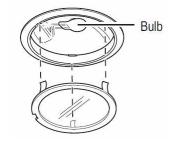

## **Marning**

Prior to change the light, switch power off at service panel to avoid any risk of accident. Allow the light cool, before handling.

# Cleaning

Clean the metal when it is dirty; don't wait until it requires aggressive cleaning in order to restore it to its original appearance.

To clean the stainless steel we recommend to use products designed for this purpose and clean, soft cloths, sponges or paper towels.

AVOID ALL CONTACT WITH PRODUCTS CONTAINING HYDROCHLORIC ACID SUCH AS BLEACH, as they can stain and damage the stainless steel surface.

## MANUEL D'UTILISATION ET ENTRETIEN


# Boutons de contrôle et affichage

Cette hotte est munie d'un contrôle électronique de ventilation et de lumière. Ce contrôle permet de faire fonctionner le ventilateur à 4 différentes vitesses, d'allumer la lumière à 3 intensités distinctes et une fonction de minuterie programmable. Cette hotte est équipée aussi d'un écran qui affiche le statut de votre hotte et facilite son usage.

## Minuterie Automatique

Cette hotte est munie d'une minuterie automatique permettant d'éviter un fonctionnement prolongé par inadvertance. De ce fait, après 2 heures de fonctionnement, la hotte cessera de fonctionner par elle-même.

La figure ci-dessous décrit les fonctions des boutons.

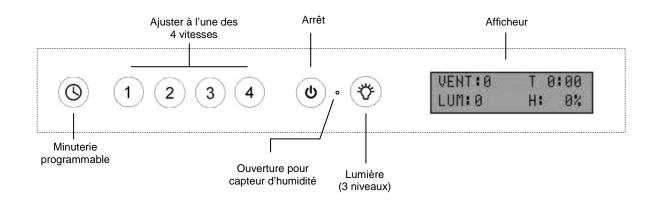

**Afficheur**: Cet écran affiche le statut de la hotte et fournit les informations de contrôle. Pour changer de langue d'affichage (Français ou Anglais) maintenez le bouton « Arrêt » et appuyer par la suite sur le chiffre « 4 ».



Arrêt: ce bouton arrête le ventilateur.

Boutons de vitesses : Ces boutons permettent de choisir l'une des 4 vitesses du ventilateur. Lors du choix de vitesse, un écran, comme celle ci-dessous

#### MANUEL D'UTILISATION ET ENTRETIEN

affichera la valeur choisie. Après un délai de quelques secondes, le menu principal apparaitra de nouveau.



**Bouton lumière**: Ce bouton permet d'allumer la lumière à 3 différentes intensités, du niveau 0 (éteinte) au niveau 3 (intensité maximale). Pour éteindre les lumières, appuyer sur le bouton jusqu'à l'obtention du niveau 0.



**Bouton minuterie**: Ce bouton vous permet d'activer et programmer la minuterie de 5 à 30 minutes. Pour ce faire, vous n'avez qu'à appuyer sur ce bouton lorsque le ventilateur est en fonction. La minuterie commencera à décrémenter et vous pourrez suivre sont état sur l'écran principal. Pour augmenter la minuterie, appuyer à plusieurs reprise jusqu'à l'obtention de la valeur désirée.



#### Entretien des filtres

Pour assurer un usage efficace de la hotte, il est important de nettoyer fréquemment les filtres. Cette hotte est équipée d'un système de rappel de nettoyage des filtres. Après chaque **50 heures** d'utilisation, l'afficheur affichera le message « NETTOYER FILTRES » vous rappelant qu'il est temps de nettoyer vos filtres.


Les filtres sont faits en acier inoxydable et peuvent être lavés à la main ou dans une lave vaisselle.

NETTOYER FILTRES RESET: TENIR OFF

#### Pour enlever les filtres :

- Arrêter le ventilateur et la lumière
- Tirer le poigner à ressort pour libérer les filtres

Pour mettre à zéro le compteur de 50 heures, appuyer sur le bouton arrêt et ne relâcher qu'une fois le message parte.

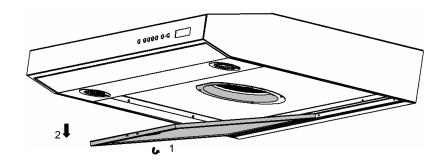


#### MANUEL D'UTILISATION ET ENTRETIEN

## Remplacement des lumières

Pour remplacer les lumières suivre les étapes suivantes :

- Enlever la plaque à verre en insérant un tournevis plat dans le petit espacement et tire doucement; 3 languettes flexibles retiennent ce couvercle.
- Tirer l'ampoule de sa position.
- Remplacer cette ampoule par une autre ampoule halogène 12volts 20 watt à insertion type G4.
- Replacer la plaque de verre en insérant les 3 languettes à leurs places.

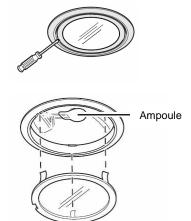

## **Avertissement**

Avant de changer la lumière, arrêter le disjoncteur du panneau principal pour éviter tout risque d'accident. Laisser l'ampoule refroidir avant de la manipuler pour la changer.

# **Nettoyage**

Nettoyer le métal une fois sale, ne pas attendre jusqu'à ce qu'il faut un agent de nettoyage agressif pour retourner à son éclat d'origine.

Pour nettoyer l'acier inoxydable nous recommandons l'usage de produits conçus à cet effet et d'un morceau de tissu doux, une éponge ou une serviette propre.

EVITER TOUT CONTACT AVEC DES PRODUITS CONTENANT DE L'ACIDE CHLORIDRIQUE COMME L'EAU DE JAVEL, puisqu'ils peuvent causer des tâches et endommager la surface en acier inoxydable de la hotte.